


AMERICAN HYDROTECH, INC.



GARDEN
ROOF
ASSEMBLY

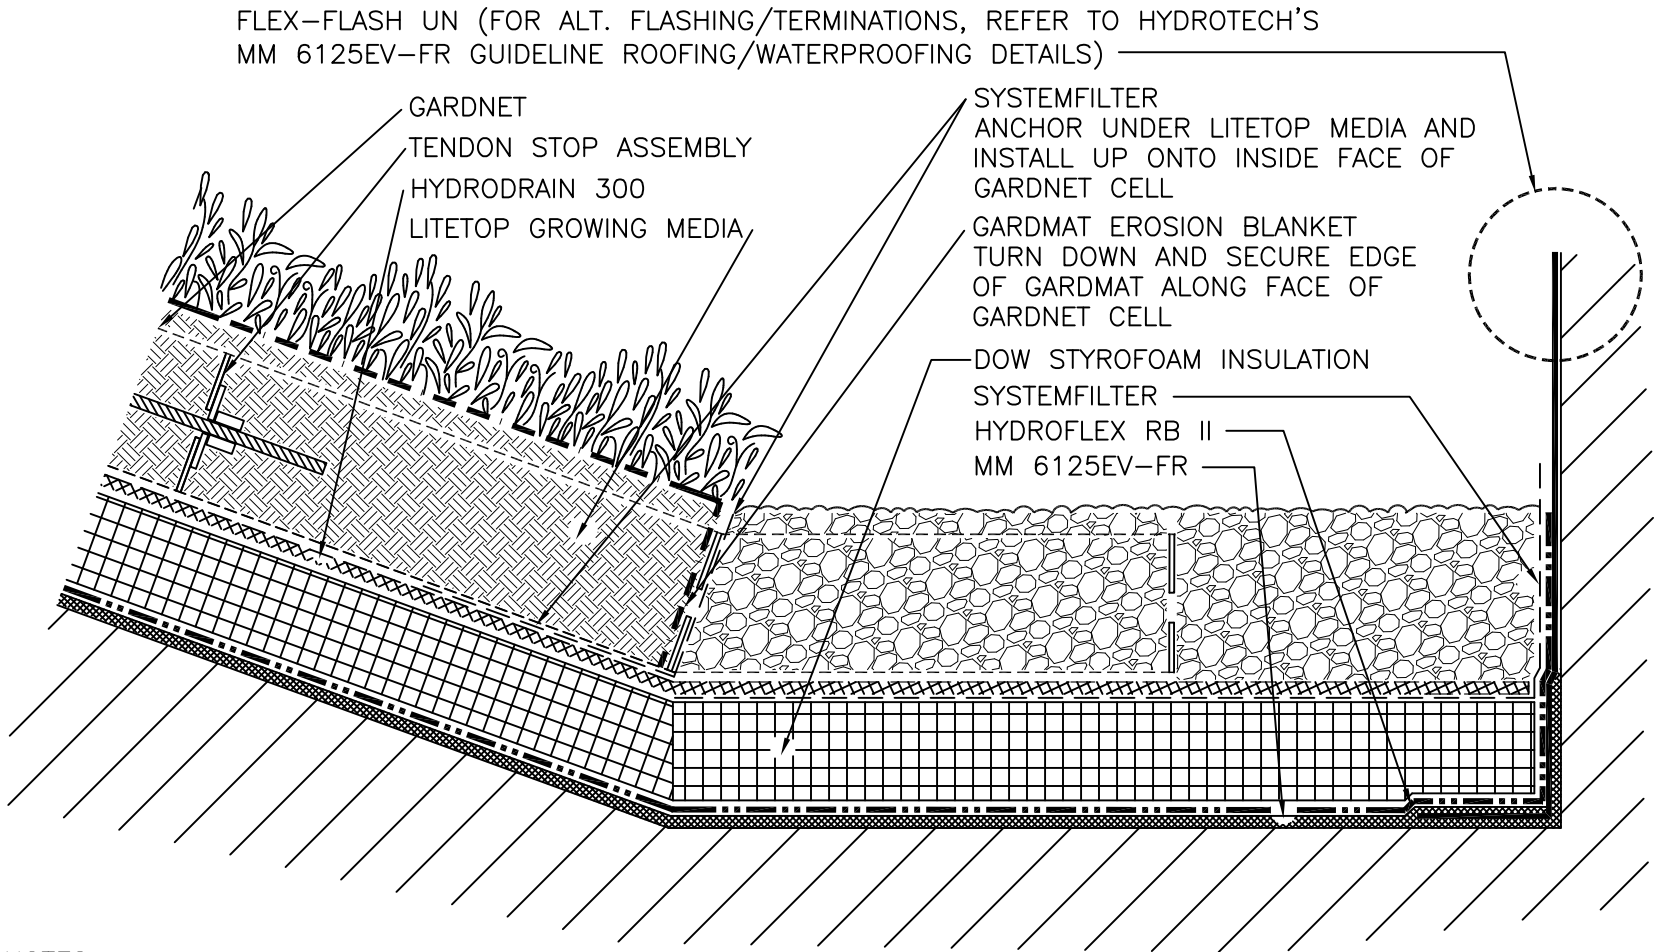

NOTES:

- BALLAST DESIGN MAY REQUIRE WIDER PERIMETER VEGETATION FREE ZONES OF STONE OR CONCRETE PAVER BALLAST. CONTACT HYDROTECH FOR BALLAST DESIGN REQUIREMENTS.
- IF NO DOW INSULATION IS INSTALLED, THE DRAINAGE MAT BELOW THE GARDNET MUST BE CHANGED TO HYDRODRAIN 302 AND INSTALLED OVER THE HYDROFLEX RB II.
- NUMBER OF STOPS AND NUMBER AND LENGTH OF REQUIRED TENDONS IS DETERMINED BY MEDIA DEPTH AND DEGREE & LENGTH OF SLOPE.
- LITETOP GROWING MEDIA IS REQUIRED FOR ALL GARDNET INSTALLATIONS. NO SUBSTITUTIONS ARE ALLOWED.
- UPPER LAYER OF GARDNET CELLS SHALL BE OVERFILLED WITH LITETOP MEDIA BY 1/2"-1".
- GARDMAT EROSION MAT SHALL BE INSTALLED WHEN PLANTING PLUGS. NO GARDMAT IS REQUIRED WHEN INSTALLING INSTAGREEN SEDUM CARPET OR TILE.

TYPICAL BOTTOM OF SLOPE
GARDNET TERMINATION AT WALL
(WITH DOW INSULATION)

NO SCALE

GN-6B